

***C-5 Single-Channel Syetem
G9 Direct-Call Door Station Series***

USER MANUAL



Please read this user manual together with /System User Manual/ carefully before using the products. Please keep it for future reference.

(VER:V1.10)

Preface

Thank you very much for using Genway products that were developed with the latest technology. To meet the demands of users, Customer Satisfaction is our goal.

Please read this manual carefully before using the products in order for the products can perform perfectly. In an effort to serve you better, we welcome any comments or suggestions you have.

Contents

1. Product Introduction	1
2. Product Features	1
3. Specifications	1
4. Appearance & Ports	2
5. Installation	3
Dimensions	3
Mounting	3
Changing name tags	4
6. Camera adjustment	5
7. Operation	6
8. Appendix :Product list	8

Announcement

Specification and performance data listed here are subject to change without notice.

Appendix :Product list

MODEL	FEATURE	MODEL	FEATURE
 2018D	Audio, 1 √ 2 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control	 2313D/2313D-C	Video 1 √ 2 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control
 2020D	Audio, 1 √ 4 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control	 2315D/2315D-C	Video 1 √ 4 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control
 2022D	Audio, 2 √ 3 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control	 2317D/2317D-C	Video 2 √ 3 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control
 2028D	Audio, 2 √ 4 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control	 2319D/2319D-C	Video 2 √ 4 buttons Speech system, proximity ID card reader, SERVICE button Port for EXIT button Easy program with remote control

1.Product Introduction

This door station is a part of C-5 one cable system. It is for multi-apartment building. As CAT.5 cable is applied, it makes the connection very easy and the performance very stable.

The system can be installed in not only a single building, but also various buildings in network. It can support every apartment to have up to four indoor phones and a video door bell. If necessary various door stations are available for different entrances in the same building. This system is also available to connect with guard unit and perimeter gate station.

2.Product Features


- √ Vandal resistant panel, stainless steel construction, waterproof, flush mounting.
- √ Compatible with all audio and video indoor phones in C-5 system.
- √ Doors can be released by various methods such as indoor phone, ID card, SERVICE button, and EXIT button.
- √ Use 1/3" CMOS color camera which is adjustable. The IR illumination offers clear image even in the dark.
- √ A sound system is programmed for friendly intercommunication.
- √ The enclosed remote control provides easy programme.

3.Specifications


Model	Operating voltage	Quiescent current (DC 35V)	Operating current (DC 35V)	Temperature	Camera
2018D	DC 35V	~50mA	~130mA	-40~+70°	
2020D	DC 35V	~50mA	~130mA	-40~+70°	
2022D	DC 35V	~50mA	~130mA	-40~+70°	
2028D	DC 35V	~50mA	~130mA	-40~+70°	
2313D 2313D-C	DC 35V	~50mA	~180mA	-40~+70°	CCD&CMOS PAL View angle:90° Adjustable angle: ~10°
2315D 2315D-C	DC 35V	~50mA	~180mA	-40~+70°	
2317D 2317D-C	DC 35V	~50mA	~180mA	-40~+70°	
2319D 2319D-C	DC 35V	~50mA	~180mA	-40~+70°	

4. Appearance & Ports

Face

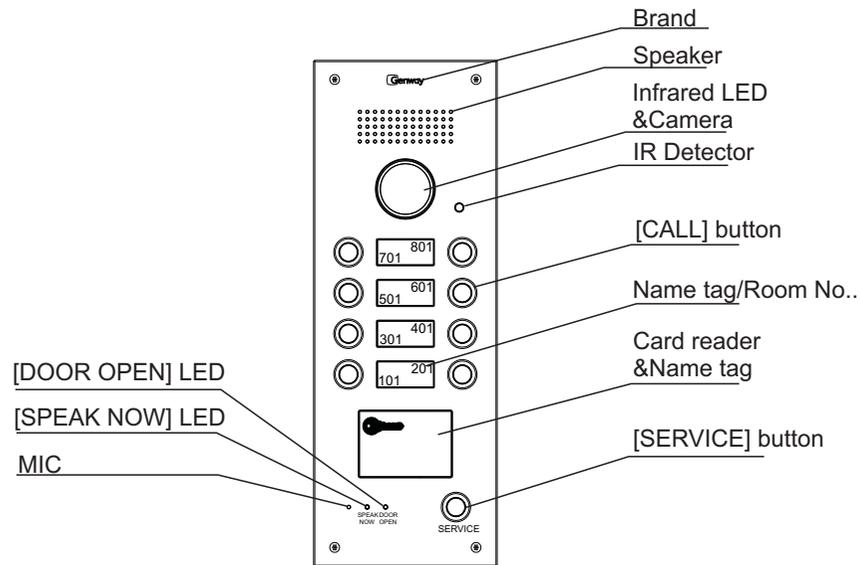


Back

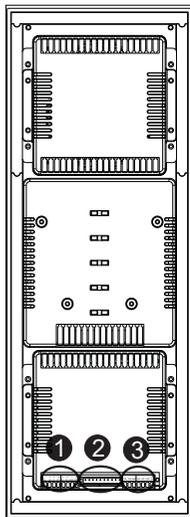

1 Port to distributor/gate-way

1	2	3	4	5	6	7	8
LA	LB	VF-	VF+	AF-	AF+	GND	DC+

2 JP1 connector & software update port

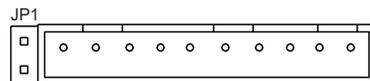

3 Port to electronic lock (options) [INDOOR]&[GND]: to EXIT button

SS	INDOOR	GND	NO	NC	COM	out	+12V


7. Operation

Door release

There are four methods to release the door.

1. *Indoor phone*: press button on the indoor phone to release the door.
2. *ID Card*: Put the registered card on the card reader (if there is) to release the door.
3. *SERVICE button*: In the authorized time, press SERVICE button on the door station to release the door. **[This button is special for postmen or other service people. The function has to be programmed by the remote control. The remote control manual has details.]**
4. *EXIT button*: Press the button (if there is) to release the door.


[Note: when the electronic lock is released, the door station will say "the door opened" and the [DOOR OPEN] LED will flash at the same time.]

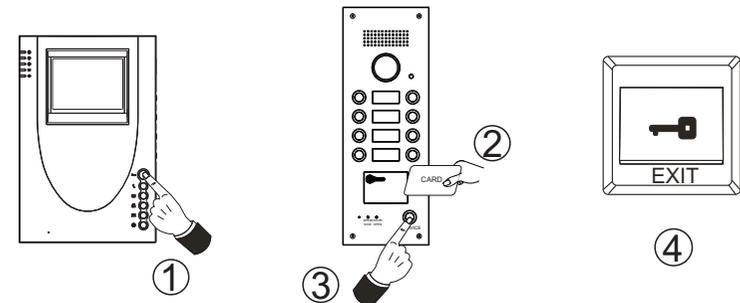

Scan monitor

1. Press button on the (video) indoor phone while the system stands by, the screen will display the image in front of the door station.
2. Press button again to end monitoring. But when there is another door station, if you press the button at the 3rd time, it will display the image in front of that door station.

[Note: the image automatically turns off in approx. 15s. During displaying, if somebody presses the CALL button on the door station, the monitoring will end automatically.]

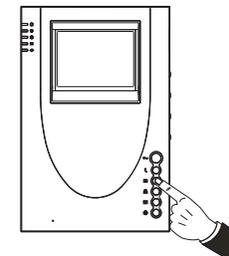


7.Operation

Please connect all necessary units according to the diagram in /System User Manual/. When the door station sounds "ON", it means the system is ready and you can use or program it.

■ Call

- 1.Press CALL button on the door station, the corresponding indoor phone chime tone sounds and the screen turns on and displays the visitor image.
- 2.If there is no answer, the system will automatically reset to standby after 30s.If the line is busy, the door station will speak "Sorry. It's busy now."


[Note:if want to cancel the call,press CALL button again.]

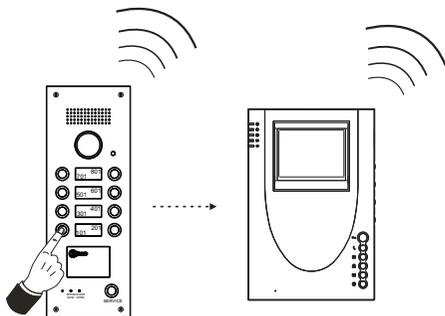

~ Answer


- 1.Press  button on the indoor phone (hands-free) or pick up the handset to answer when it rings. [SPEAK NOW] LED will flash at the same time.
- 2.Press  button on the indoor phone to release the door.
- 3.Press  button on the indoor phone (hands-free) or hang up the handset to end the talk.

[Note: The talk is allowed in 120s.]

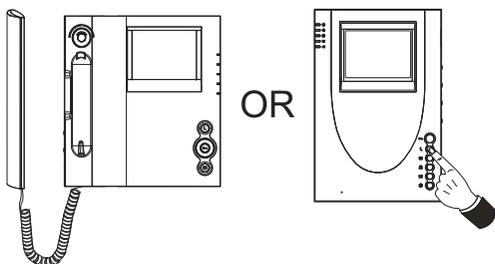


5.Installation

~ Dimensions

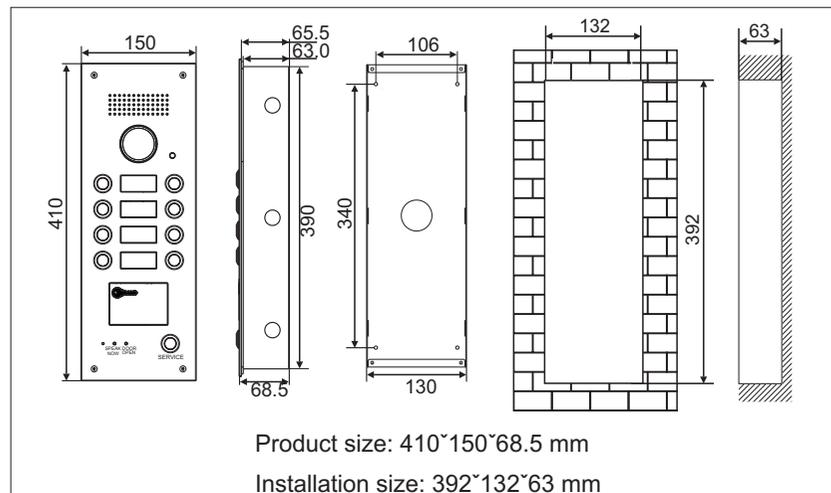

~ Mounting

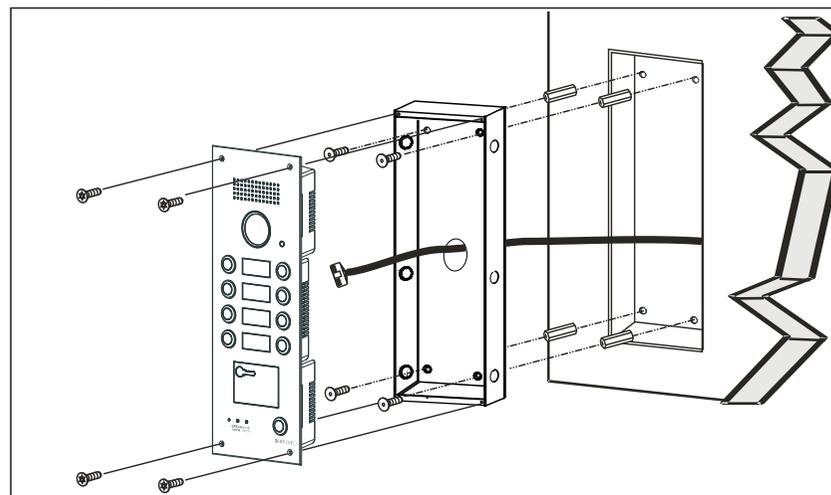


~Notes:


1. Mind the installation size while producing a groove for the back cover.
2. Control the depth of the groove carefully so that it is the same as the one of the back cover.
3. We suggest the height between 1100mm and 1400mm. But please also consider other situations such as view angle of the camera, height of disabled persons.

5. Installation


Changing name tags

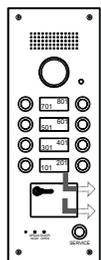


1. Push the right edge and move to right.

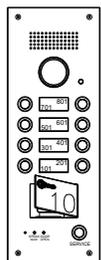


2. Take off the plastic.

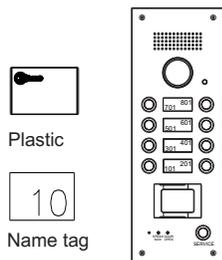


3. Take out the name tag.

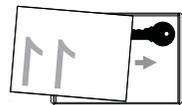


4. Put in the name tag.

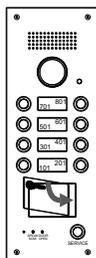

5. Insert the right edge into slotting.

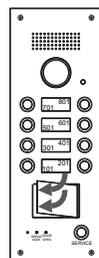




6. Push the left edge and move to left.

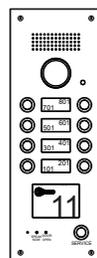

7. Finish.

[Note: All the same to the other small name tags.]

6. Camera adjustment

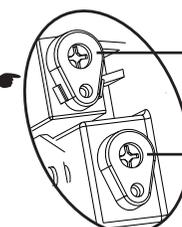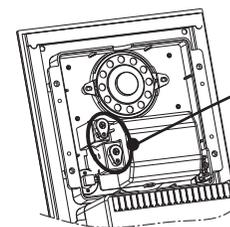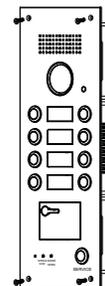

A: for up and down

B: for left and right

