

DigiSense

DT Digital Detectors

Models: Digi-412DTPT



RISCO
GROUP

Creating Security Solutions
With Care.
riscogroup.com

© RISCO Group 10/2011

5IN1264 D

RTTE Compliance Statement

Risco Ltd. hereby declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For the EC Declaration of Conformity please refer to our website: www.riscogroup.com



Digi-412DTPT applicable countries (European version):

AT	BE	CY	CZ	DK
BE	FI	FR	DE	GR
HU	IE	IT	LV	LT
LU	MT	NL	PL	PT
SE	SL	ES	SK	GB
BG	RO	TR	CH	NO

Digi-412DTPT applicable countries (German Version): AT, CZ, SL, DE, TR, RU, EE

DigiSense FCC compliance Section (US version):

FCC Part 15 Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.






However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

FCC Warning:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

All rights reserved. No part of this document may be reproduced in any form without prior written permission from the publisher.

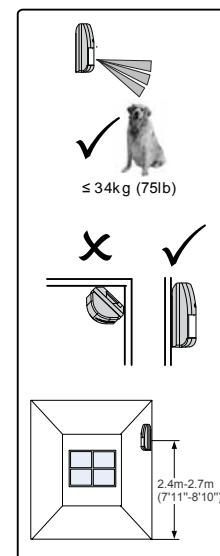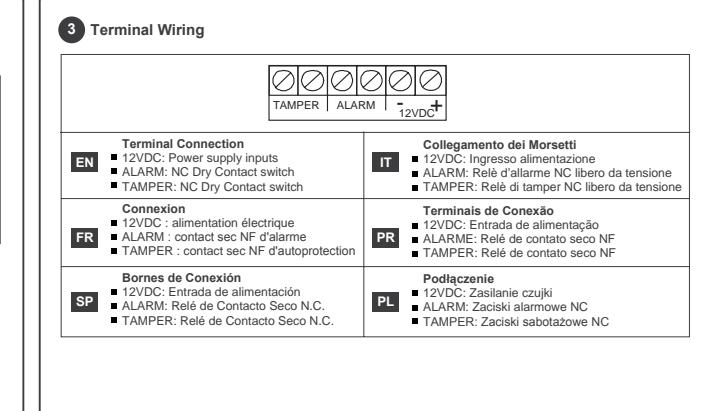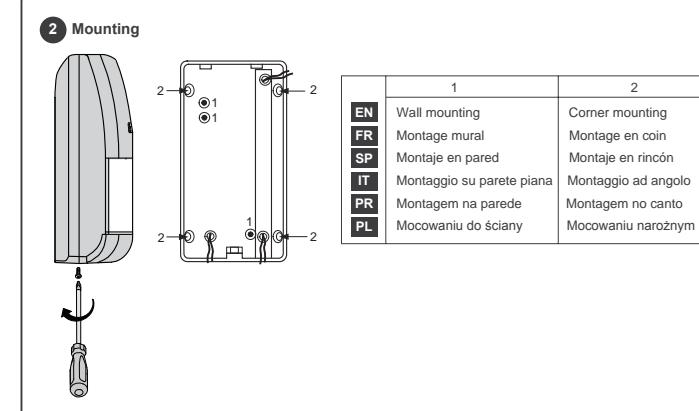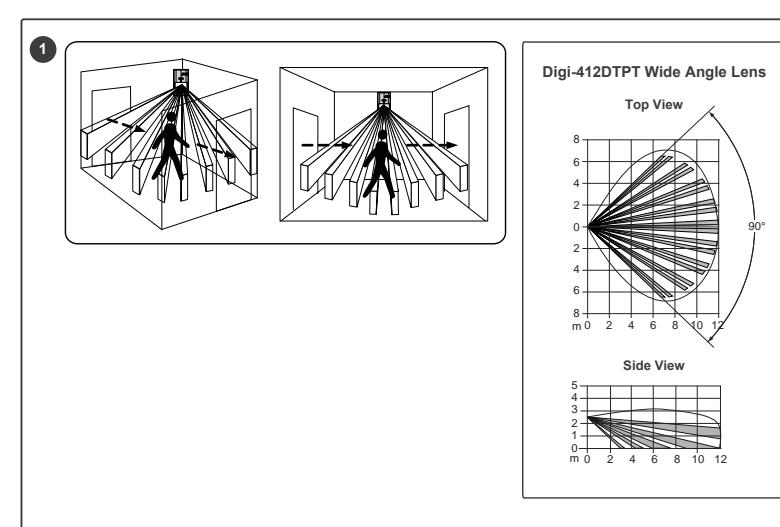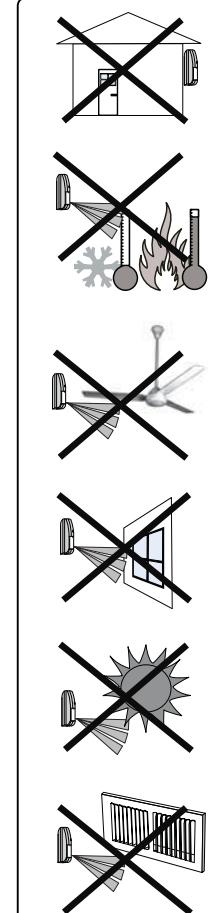

④ DIP Switch & Jumper Settings

	ON	OFF	Important
SW1-1: Pulse 1/2	EN 1 pulse	2 pulses	For corridor and curtain lens use only 1 pulse.
	FR 1 impuls	2 impuls	Pour les lentilles rideau et couleur, n'utilisez qu'une impulsion.
	SP 1 pulso	2 pulsos	Para la lente de pasillo o cortina usar sólo 1 pulso.
	IT CHIUSO 1 impulso	APERTO 2 impulsi	Per le lenti a tenda o corridoio utilizzare solo 1 impulso.
	PR 1 pulso	2 pulso	Para lente de corredor, use apenas o pulso 1.
	PL 1 impuls	2 impulsów	Ważne: Dla soczewki korytarzowej i kurtynowej licznik impulsów należy ustawić w pozycji ON (1 impuls).

	ON	OFF
SW1-2: LED ON/OFF	EN LED Enable	LED Disable
	FR LED Activée	LED Désactivée
	SP LED Activado	LED Desactivado
	IT LED Attivato	LED Disattivato
	PR LED Ativado	LED Desativado
	PL LED Aktywna	LED Wyłączona

